


Power Pack

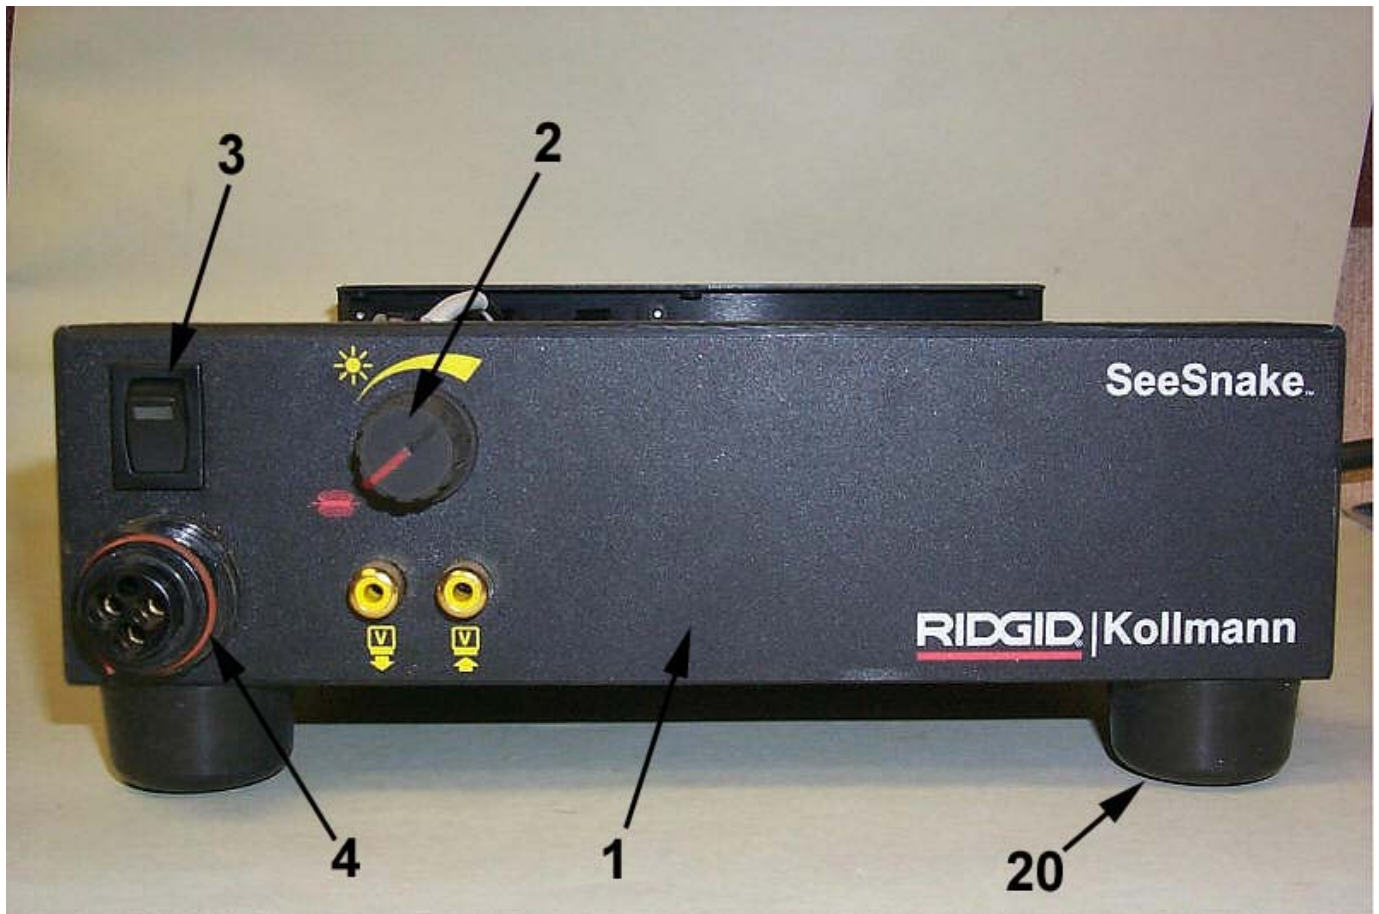


**Note: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Cat No.	Description
1	87262	Face Plate Adhesive sticker
2	87152	Knob w/ set screw
3	86052	Power Switch Assy
4	77307	Bulkhead Connector - Threaded
19	76952	Kick Stand Assy (Not Shown)
20	86037	Rubber Feet


<Q:\s\SEESNAKE\PowerPack.doc>

Power Pack

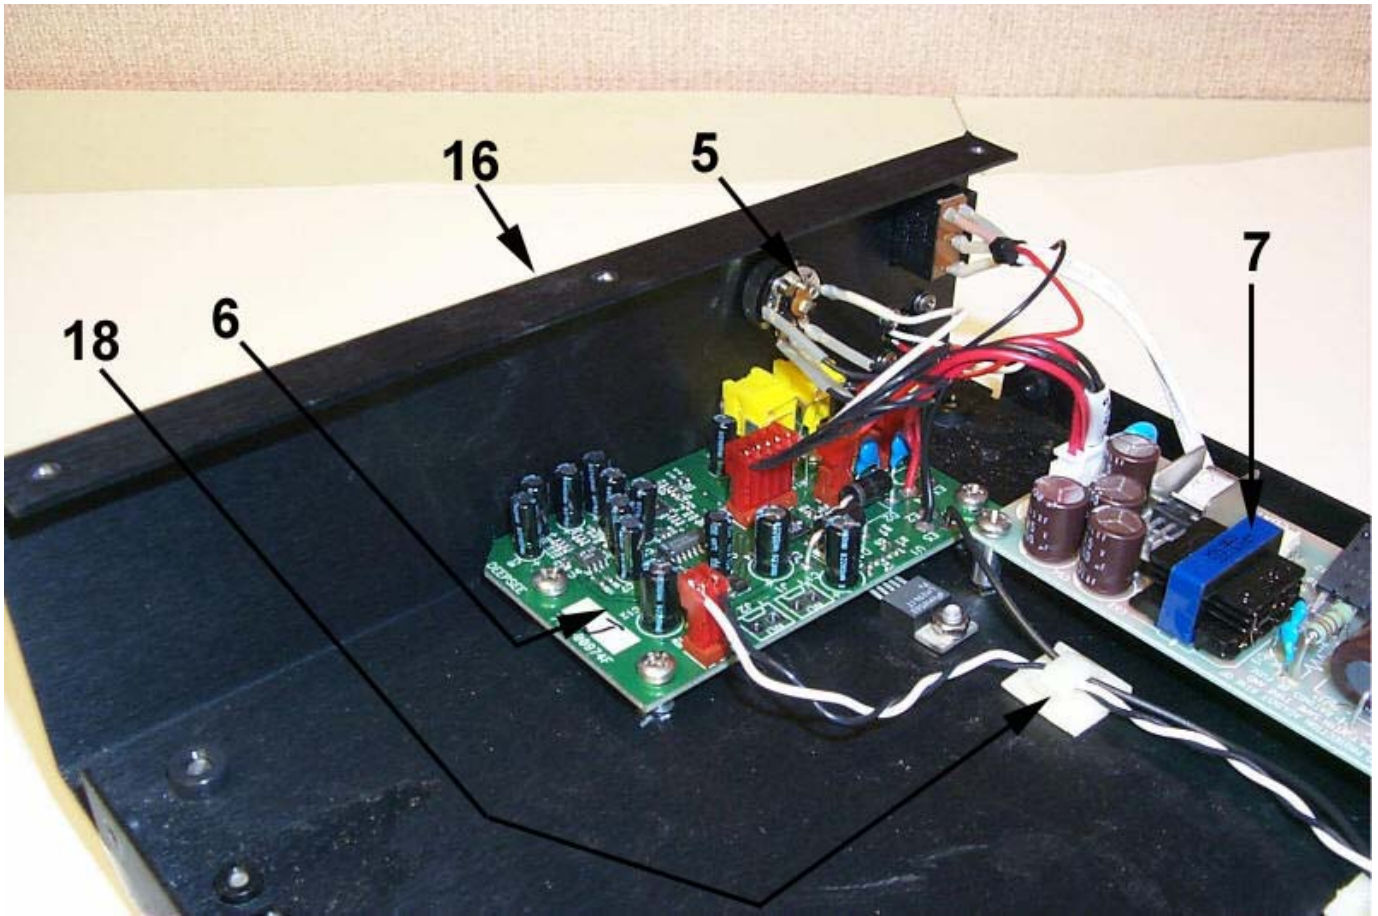


Ref. No.	Cat No.	Description
5	87157	Dimmer Control Switch Assy (Yellow)
6	87267	Power Plus Board
7	87272	Power Board (Power Supply) "Cosel"
16	87282	Power Pack Case - Bottom
18	87247	Adhesive Wire Clips

Power Pack

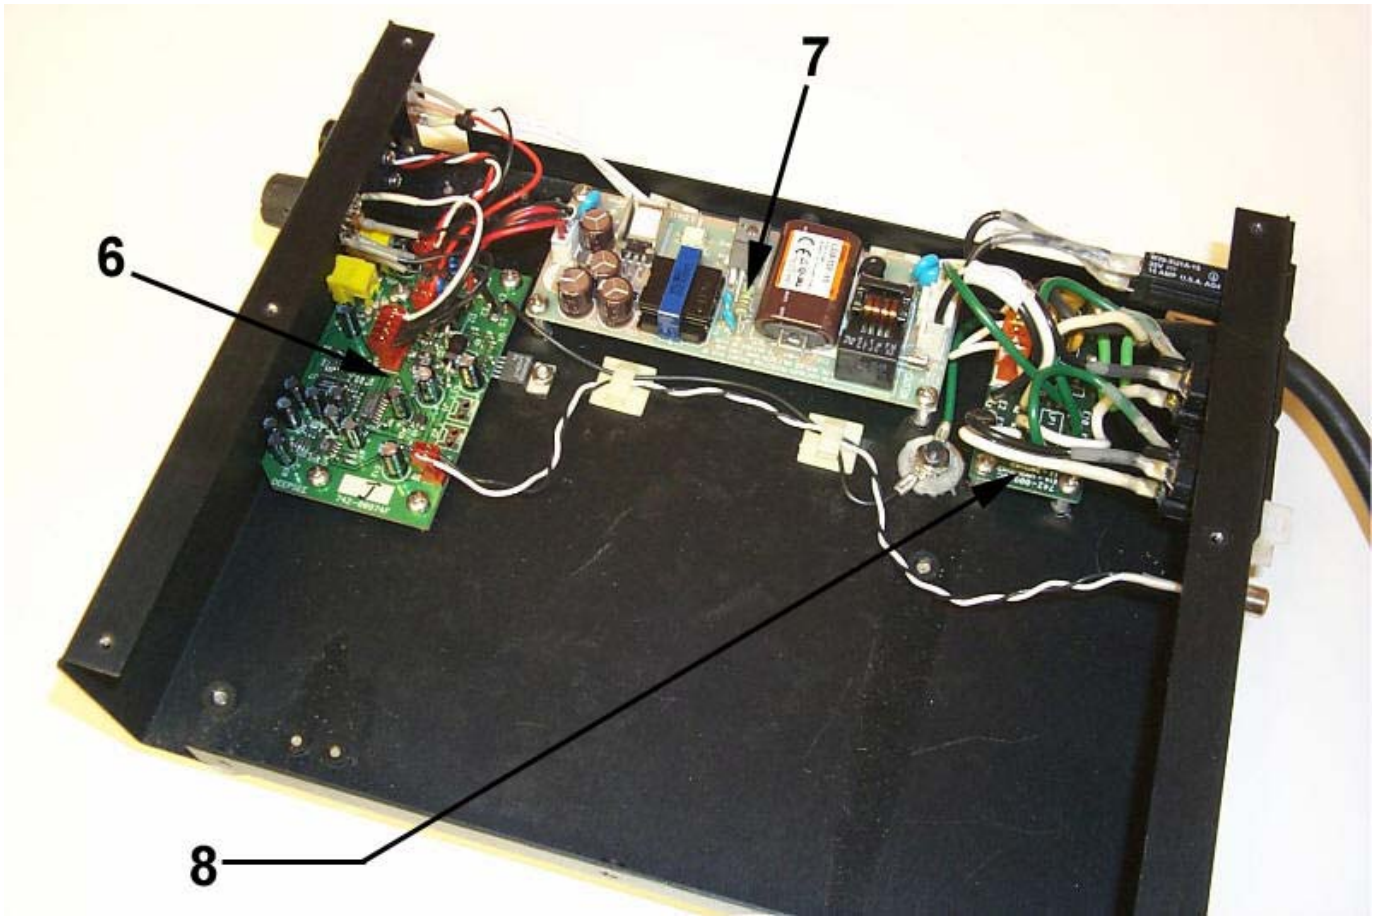


Ref. No.	Cat No.	Description
6	87267	Power Plus Board
7	87272	Power Board (Power Supply) "Cosel"
8	87177	Power Board (Power Protection)

Power Pack

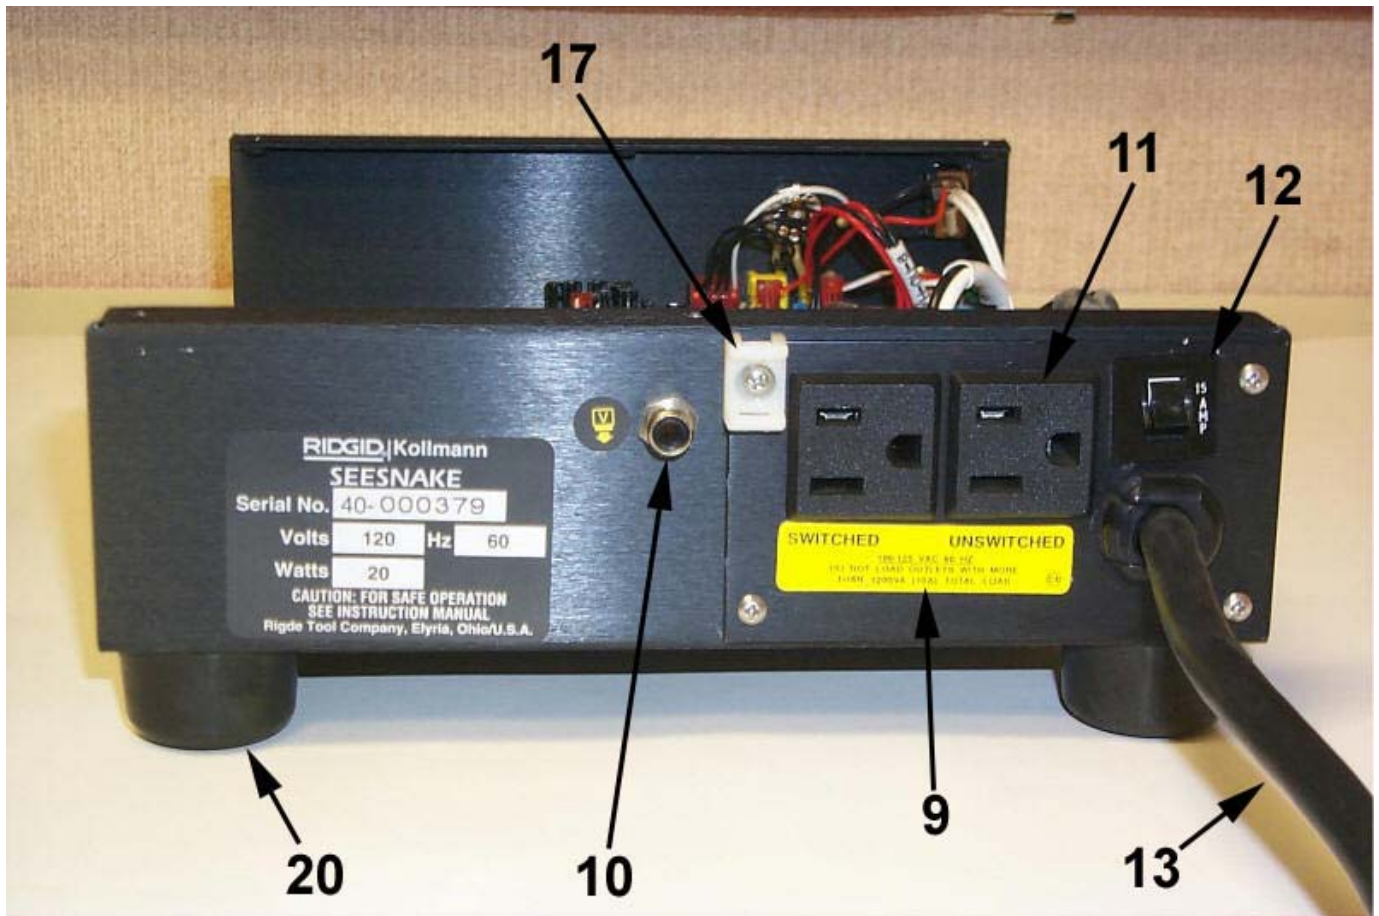

Ref. No.	Cat No.	Description
9	87187	Rear Plate - Outlet Half (EIA)
	87192	Rear Plate - Outlet Half (CCIR)
10	87277	Panel Mount RCA Jack Assy
11	87212	Outlet Only - (EIA)
	87217	Outlet Only - (CCIR)
12	86062	Circuit Breaker - 15 AMP (EIA)
	86067	Circuit Breaker - 6 AMP (CCIR)
13	72002	GFCI Power Cord (EIA)
	87222	GFCI Power Cord (CCIR)
17	87242	Cable Tie
20	86037	Rubber Feet

Power Pack Plus Audio

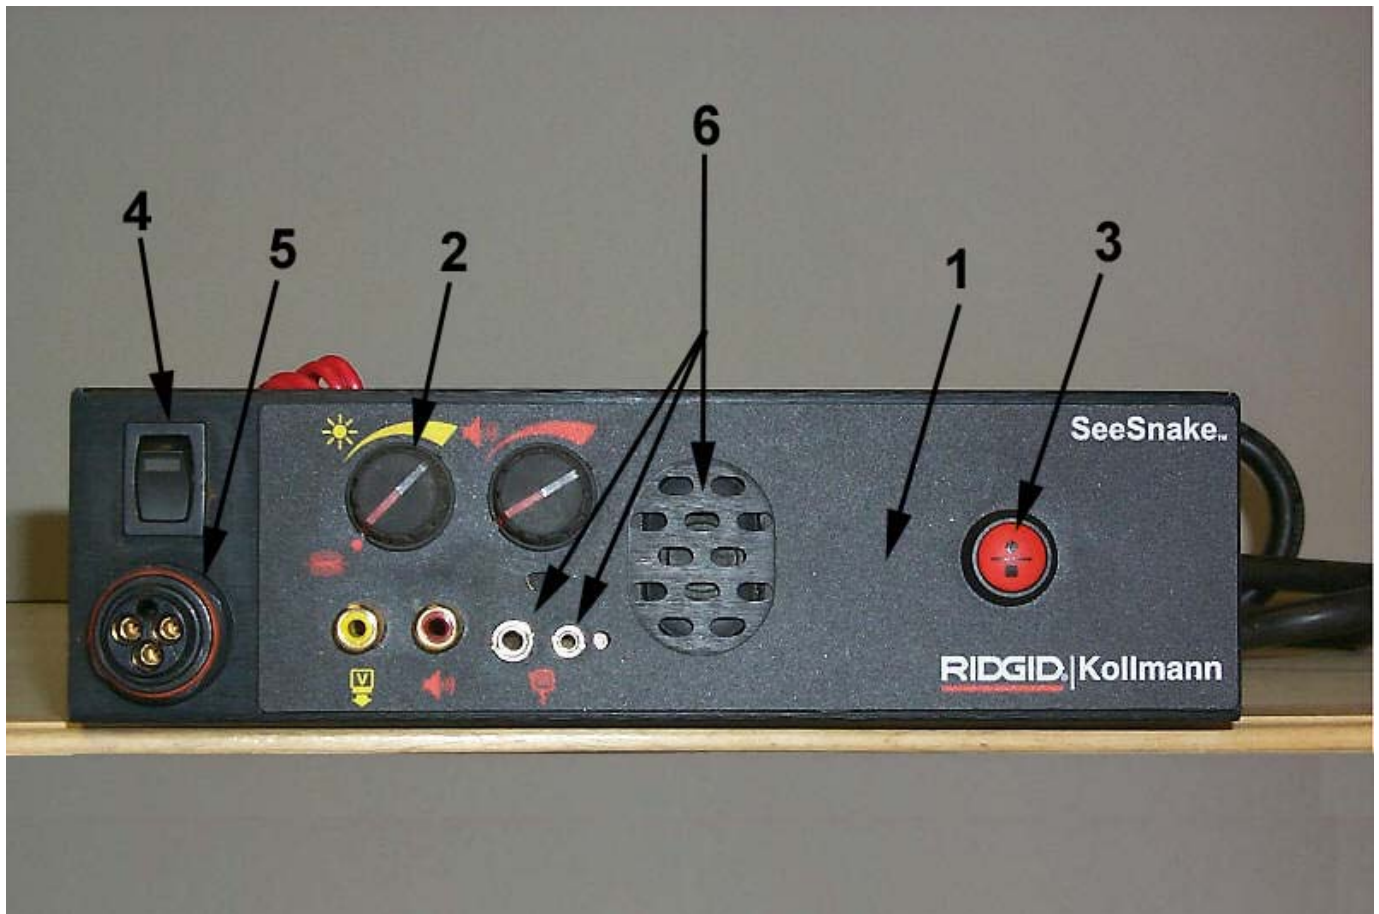


**Note: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Cat No.	Description
1	87147	Face Plate w/ adhesive sticker
2	87152	Knob w/ set screw
3	86042	"RED" Record Button Assy
4	86052	Power Switch Assy
5	77307	Bulkhead Connector - Threaded
6	86092	Speaker/Microphone Jack Assy


<Q:\s\SEESNAKE\PowerPack+.doc>

Power Pack Plus Audio

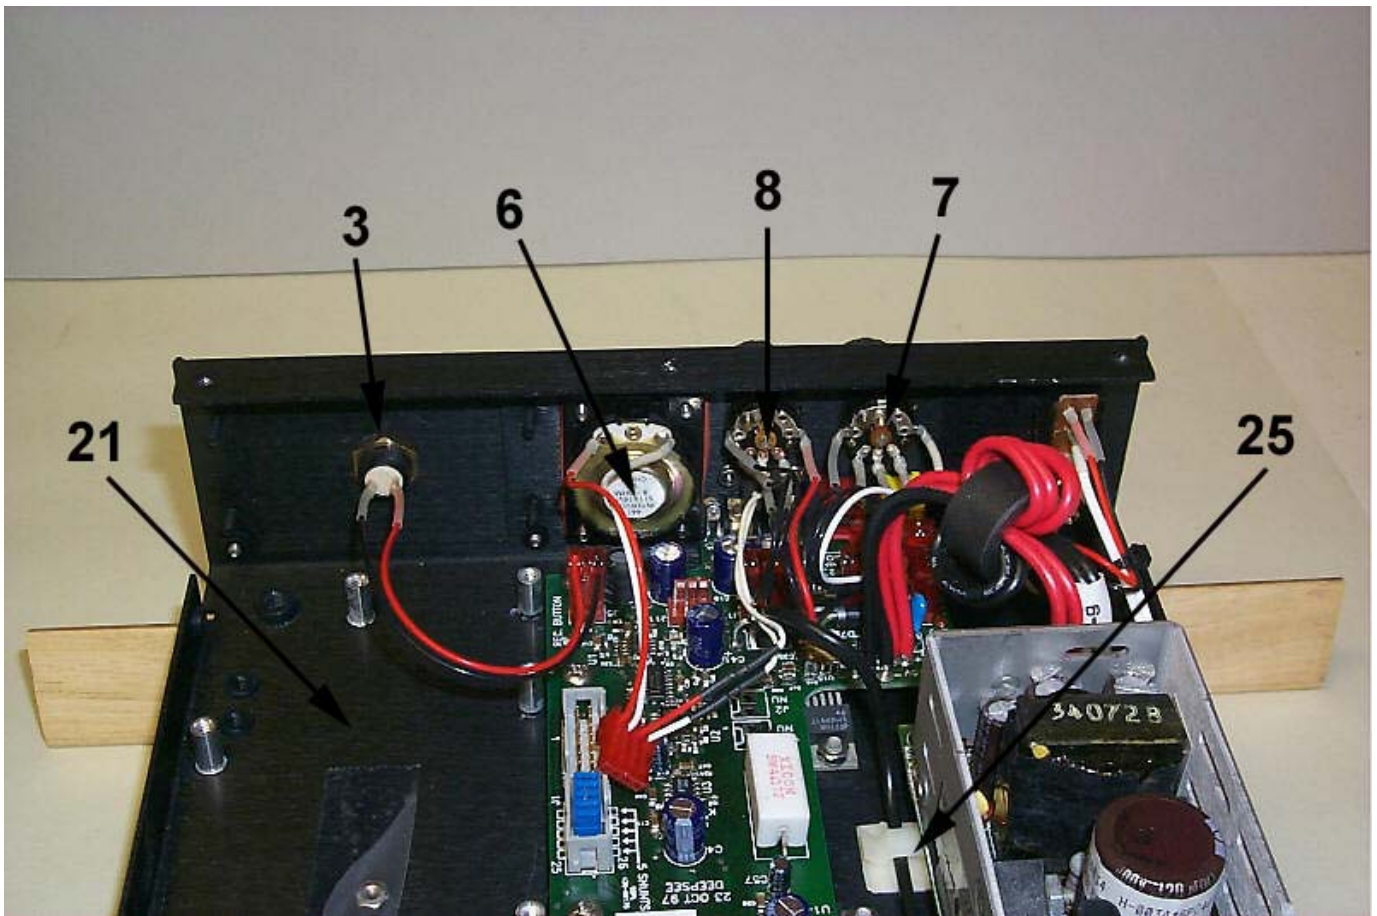


Ref. No.	Cat No.	Description
3	86042	"RED" Record Button Assy
6	86092	Speaker/Microphone Jack Assy
7	87157	Dimmer Control Switch Assy (Yellow)
8	87162	Volume Control Switch Assy (Red)
20	87232	Power Pack Case – Top (Not Shown)
21	87237	Power Pack Case - Bottom
25	87247	Adhesive Wire Clips

Power Pack Plus Audio

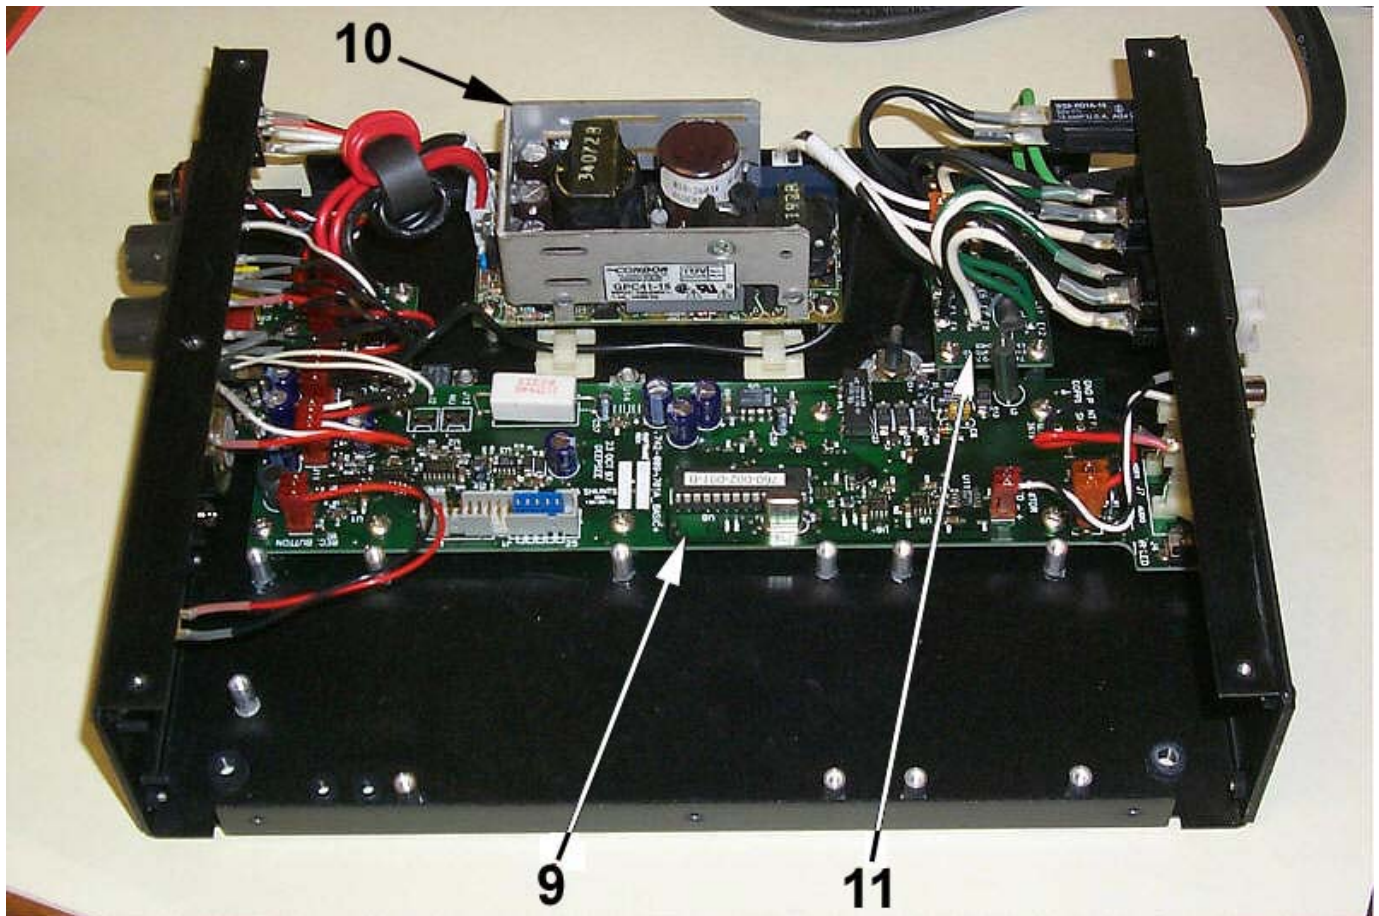

Ref. No.	Cat No.	Description
9	87167	Power Board (L-Board)
10	87172	Power Board (Power Supply) "Condor"
11	87177	Power Board (Power Protection)

Power Pack Plus Audio

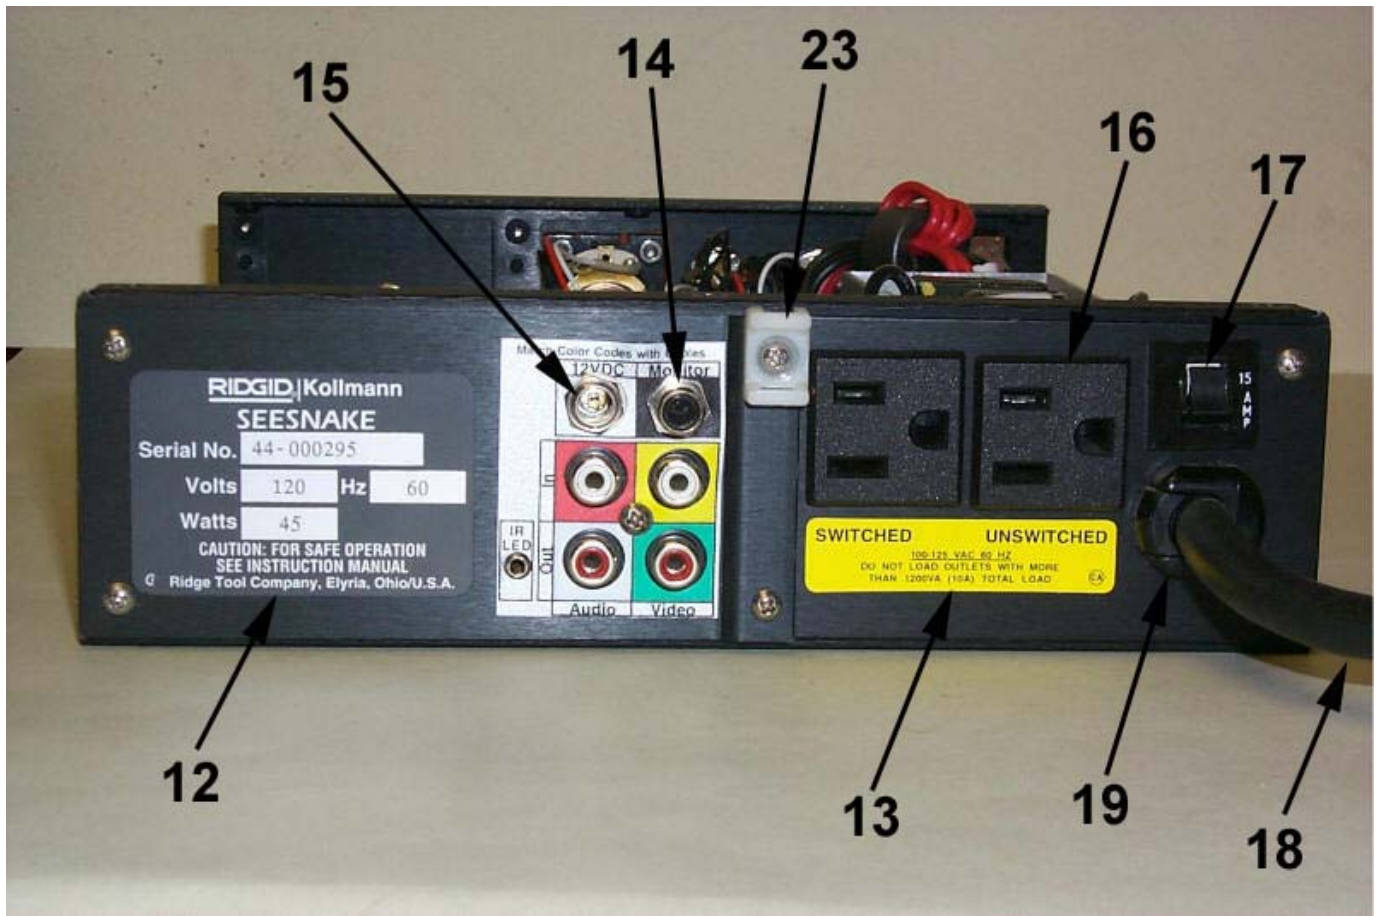

Ref. No.	Cat No.	Description
12	87182	Rear Plate - Jack Half
13	87187	Rear Plate - Outlet Half (EIA)
	87192	Rear Plate - Outlet Half (CCIR)
14	87202	Monitor Jack Assy
15	87207	12 VDC Jack Assy
16	87212	Outlet Only - (EIA)
	87217	Outlet Only - (CCIR)
17	86062	Circuit Breaker - 15 AMP (EIA)
	86067	Circuit Breaker - 6 AMP (CCIR)
18	72002	GFCI Power Cord (EIA)
	87222	GFCI Power Cord (CCIR)
19	87227	Cord Gromment
23	87242	Cable Tie